



*Torin*  
**BLACK JACK<sup>®</sup>**  
**OWNER'S MANUAL**  
**DOUBLE SAFETY JACK STANDS**

*Torin*  
**BLACK JACK<sup>®</sup>**


FOR CUSTOMER SERVICE

**1800 833 800**

Imported by

SJS Investment Pty Ltd

Bayswater WA6053

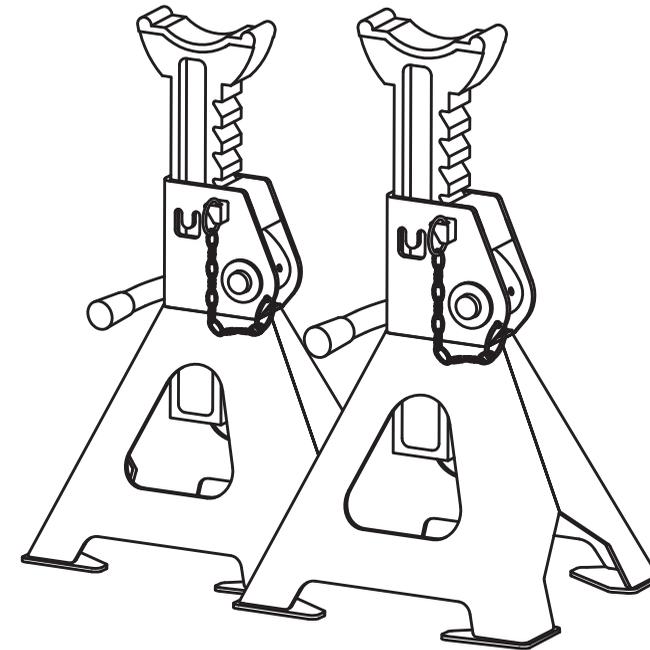

<b>MODEL</b>	<b>BJ-10024JS</b>	<b>1500KG</b>
<b>MODEL</b>	<b>BJ-10034JS</b>	<b>2000KG</b>
<b>MODEL</b>	<b>BJ-10064JS</b>	<b>4000KG</b>
<b>MODEL</b>	<b>BJ-100214JS</b>	<b>8000KG</b>

COMPLIES WITH AUSTRALIAN/NEW ZEALAND STANDARD  
 AS/NZS 2538:2004

**CAUTION**

*Use vehicle support stands on a hard level surface, preferably concrete Use vehicle support stands in pairs  
 Check that no part of the underbody of the vehicle will foul as the stands are positioned  
 Check the unlifted wheels of the vehicle Ensure that the locking mechanism is fully engaged  
 Do not extend the height of the stand beyond its maximum working height*



## SPECIFICATIONS

Model	BJ-10024JS	BJ-10034JS	BJ-10064JS	BJ-100214JS
Working Load Limit	1500kg	2000kg	4000kg	8000kg
Max. Working Height	420mm	425mm	605mm	715mm
Height Lowerd	278mm	288mm	395mm	465mm

## OPERATIONS

1. Be sure to bend the bar after inserting ratchet into frame to prevent ratchet from detaching out of the frame.
2. Put the jack stands on hard level ground.
3. Adjust height by pulling up on ratchet.
4. Position the load to the centre of the saddle and slowly lower the vehicle on to the jack stands.
5. Secure ratchet by turning the locking handle to hold the load. Make sure the safety pin has been securely inserted.
6. Release safety pin and locking handle to let the ratchet slide down to the lowest position when storing the jack stand.
7. If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designer, making sure that operator comprehends their contents.
8. Inspect the jack stands before each use . DO NOT USE IF BENT, BROKEN OR CRACKED COMPONENT HAS BEEN NOTED. Prevent corrosion by cleaning as needed and wipe with a oily cloth also keep in dry area when not in use.


## BEFORE USE

1. Visual inspection shall be performed before each use of the stand by checking abnormal condition, such as cracked welds, leaks and damaged, loose, or missing parts if stand is believed to have been subjected to abnormal load or shock inspection shall be made by authorized repair facility.
2. Equipment that appears damage or worn or operates abnormally shall be removed from service until repair.
3. Repair should be made by an Authorized repair facility. Annual inspection of the stand is recommended and should be made by the manufacturer or the supplier's authorized repair facility to ensure that your jack stand is in optimum condition and that the stand has correct decals and safety labels specified by the manufacturer.

## INSTRUCTIONS

1. Use vehicle support stands on a hard level surface, preferably concrete.
2. Use vehicle support stands in pairs.
3. Check that no part of the underbody of the vehicle will foul as the stands are positioned
4. Ensure that the locking mechanism is fully engaged
5. Chock the unlifted wheels of the vehicle.
6. Do not extend the height of the stand beyond its maximum working height.

## PARTS LIST

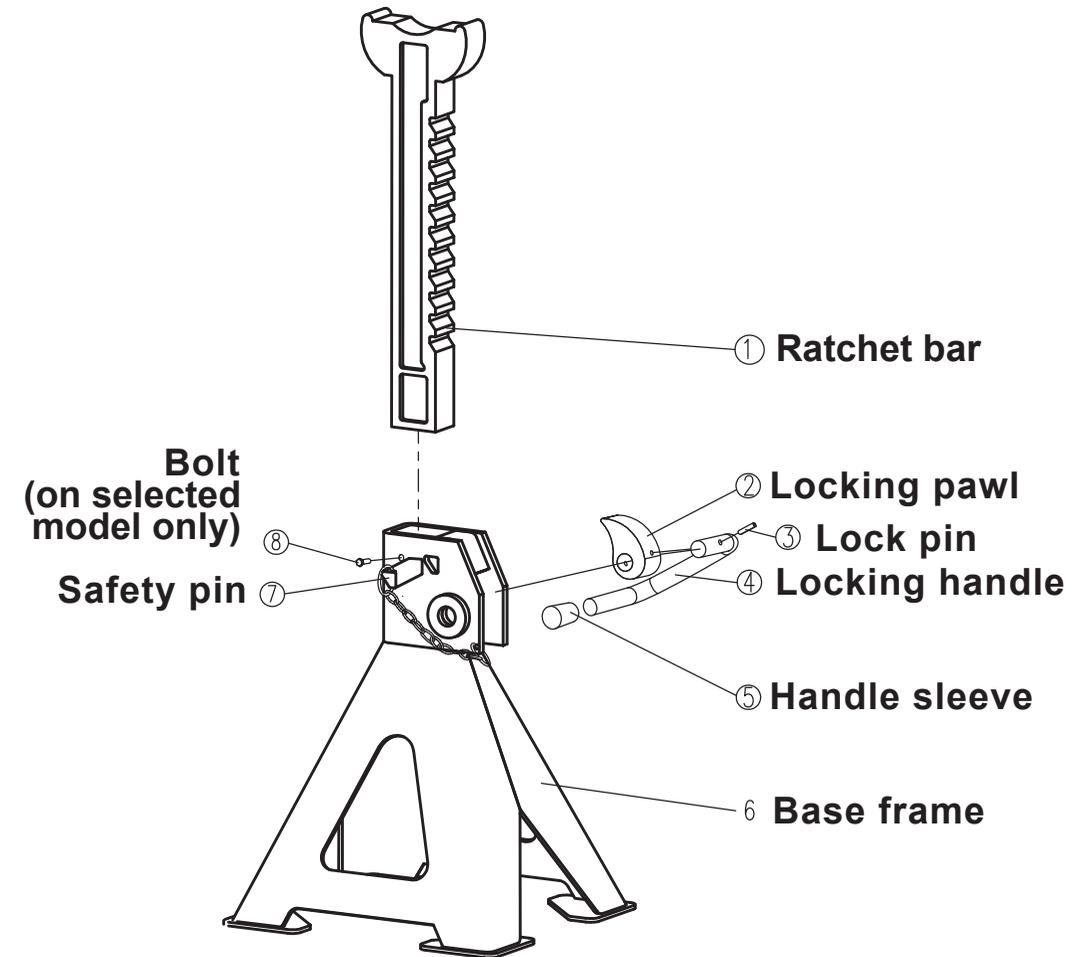

## WARNING!

**WARNING! Use only in pairs and on hard level surfaces (eg Concrete), ensuring the stand is positioned under a solid portion of the vehicle.**