

Pramac PY000A0000S - Automatic Mains Failure Panel



Product Description

Pramac Automatic Mains Failure (AMF) Panel with connector for your Pramac generator, also referred to as the Automatic Transfer Switch.

This version permits to control all the functions about a generator. It's built to monitor mono phase or three phase with neutral systems in alternate current; it permits to transfer the user's load on generator when the mains voltage fails. Conversely, as soon as AMF system detects the power grid, it stops the generator. A very popular accessory to add to an auto start Pramac generator for mains power back up.

Features

- Built to Single Phase or Three Phase
- Connects to Pramac Generators
- Automatic Transfer Switch
- Controls all Functions of a Generator

Specifications

- Phase: Single Phase/Three Phase
- Weight: 8kg
- Dimensions: 420mm x 275mm x 180mm